

DISCLAIMER OF WARRANTIES
THIS WARRANTY IS EXPRESSLY IN PLACE OF ALL OTHER
WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED
WARRANTY OF MERCHANTABILITY OR FITNESS FOR A
PARTICULAR PURPOSE.

to the original purchaser McGard LLC warrants its parts against defects of workman-
ship and materials for a period of one year. Individual parts suspected of defects must
be returned prepaid and adequately packaged to McGard and after inspection will be
replaced without charge if found to be defective. This is the only warranty on McGard
products and no other express warranty will be binding on the manufacturer. Corrosion on
parts due to neglect, adverse weather or chemicals is not covered by this warranty. This
warranty does not cover any item that has been damaged, mutilated, altered, misused,
abused or forcibly removed. McGard locks are not guaranteed to be theft proof nor does
each set have a unique code. McGard reserves the right to make changes in specification
and design.

REMEDIES EXCLUSIVE: McGard's liability shall be limited exclusively to repairing or
replacing parts under the conditions as aforesaid, and in no event will McGard be liable
for consequential damages.

LIMITED WARRANTY

INSTALLATION INSTRUCTIONS

1. Remove one lug nut from each wheel. If studs are dirty, clean with a wire brush prior to installing locks.
2. By hand, install a McGard wheel lock on each wheel.
3. Take the special key supplied in the wheel lock set and place it on top of the wheel lock, turning until the key and wheel lock patterns engage. Place the lug wrench on the key, and while applying pressure on the key tighten the wheel lock to the recommended torque specified by the trailer manufacturer. For best results use a torque wrench and socket for final tightening.

NOTE: For ease of installation and removal, the wheel lock should always be the last lug nut tightened and the first one loosened. Locks should be re-torqued after the first 25 miles of driving. In some instances, wheels should be balanced after lock installation.

CAUTION: Use of an impact wrench may cause permanent damage to lock and key.

If in doubt about lock application, ask your dealer for assistance.

See enclosed warranty information.

09625

DISCLAIMER OF WARRANTIES
THIS WARRANTY IS EXPRESSLY IN PLACE OF ALL OTHER
WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED
WARRANTY OF MERCHANTABILITY OR FITNESS FOR A
PARTICULAR PURPOSE.

to the original purchaser McGard LLC warrants its parts against defects of workman-
ship and materials for a period of one year. Individual parts suspected of defects must
be returned prepaid and adequately packaged to McGard and after inspection will be
replaced without charge if found to be defective. This is the only warranty on McGard
products and no other express warranty will be binding on the manufacturer. Corrosion on
parts due to neglect, adverse weather or chemicals is not covered by this warranty. This
warranty does not cover any item that has been damaged, mutilated, altered, misused,
abused or forcibly removed. McGard locks are not guaranteed to be theft proof nor does
each set have a unique code. McGard reserves the right to make changes in specification
and design.

REMEDIES EXCLUSIVE: McGard's liability shall be limited exclusively to repairing or
replacing parts under the conditions as aforesaid, and in no event will McGard be liable
for consequential damages.

LIMITED WARRANTY

INSTALLATION INSTRUCTIONS

1. Remove one lug nut from each wheel. If studs are dirty, clean with a wire brush prior to installing locks.
2. By hand, install a McGard wheel lock on each wheel.
3. Take the special key supplied in the wheel lock set and place it on top of the wheel lock, turning until the key and wheel lock patterns engage. Place the lug wrench on the key, and while applying pressure on the key tighten the wheel lock to the recommended torque specified by the trailer manufacturer. For best results use a torque wrench and socket for final tightening.

NOTE: For ease of installation and removal, the wheel lock should always be the last lug nut tightened and the first one loosened. Locks should be re-torqued after the first 25 miles of driving. In some instances, wheels should be balanced after lock installation.

CAUTION: Use of an impact wrench may cause permanent damage to lock and key.

If in doubt about lock application, ask your dealer for assistance.

See enclosed warranty information.

09625